


Temporary Speed Bypass Instructions

1. Press and hold the RED SPEED box

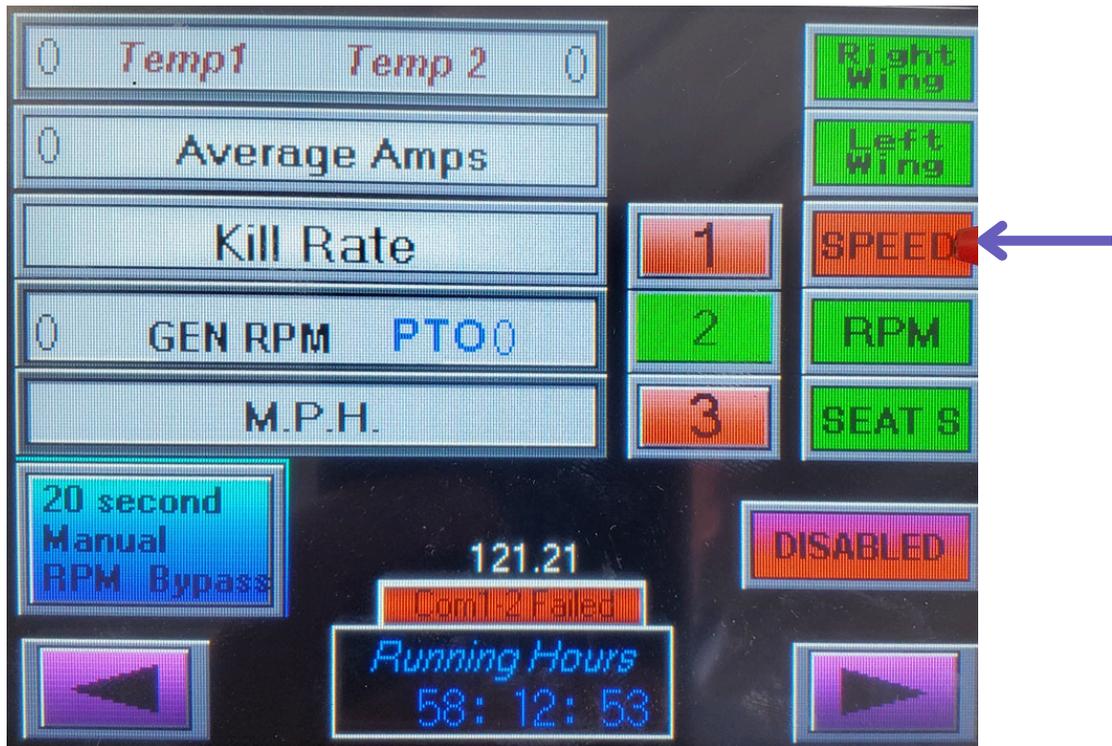


2. Read instructions and Press I Agree if you choose to use the bypass



3. The Auto Start feature that is explained on page E7 of the operator manual is not disabled.

4. Before you start moving Press the Speed box again to begin bypass.
5. The Speed bypass times out in 20 seconds.

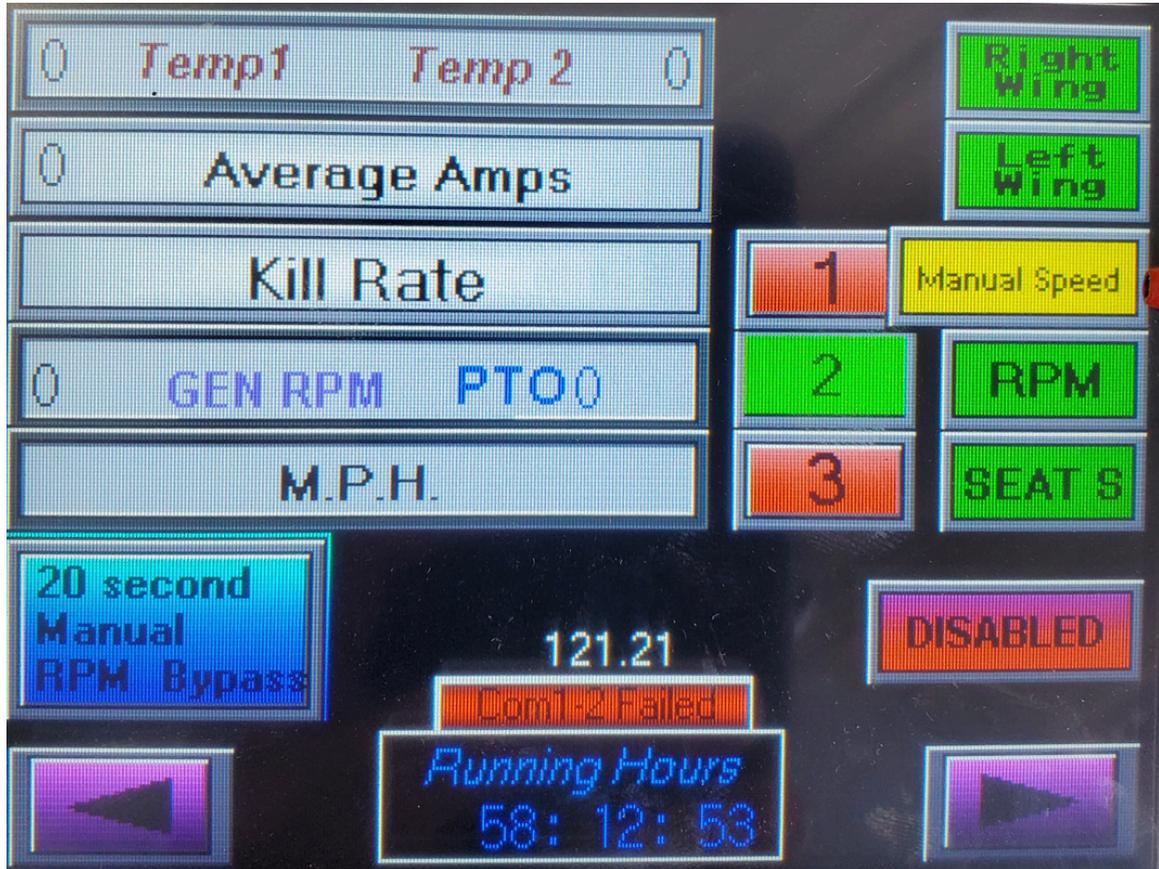

This is the process for the bypass. Pressing the RED SPEED box will have to be done each time before starting the next pass.

The Manual Speed will shut off if the AMPERAGE does not fluctuate. So in clean parts of the field LOW SPEED shutdowns may still occur.