



No Generator RPM'S Rigid Boom

1. Operator is seated in seat and box is GREEN for SEAT S.
2. PTO spinning at 1000-1100 PTO RPMs (verify with tractor engine RPM's at 2000ish)
3. E-Stop pulled OUT! Check Monitor Screen for warning saying "E-Stop pressed".

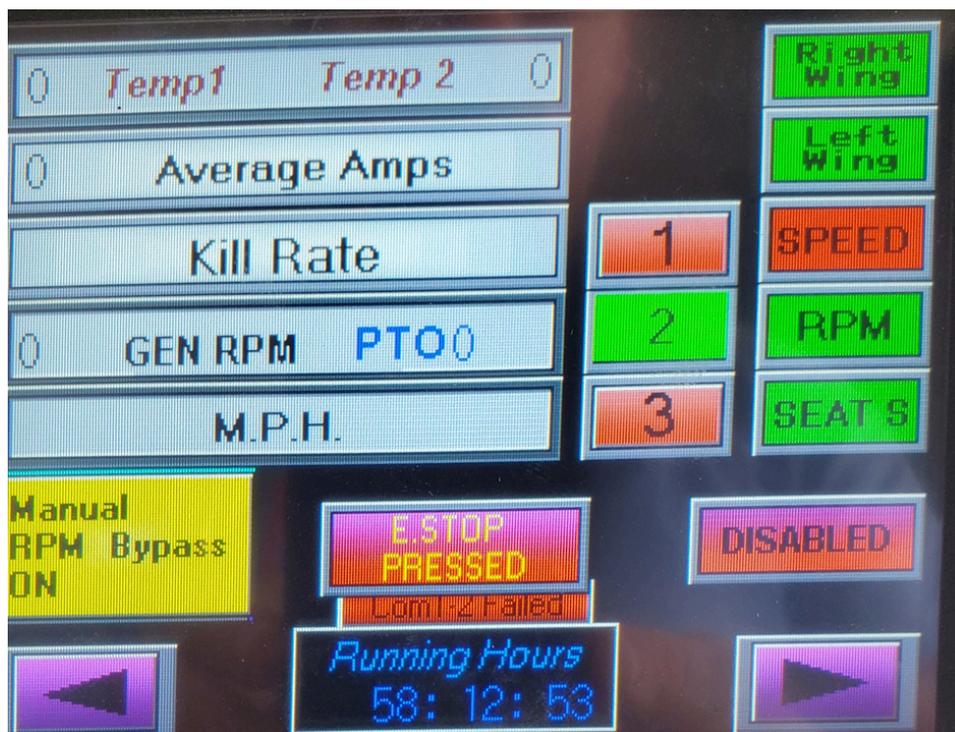

4. Press “20 second manual RPM BYPASS” (light blue box lower left corner).
5. Check for GREEN RPM box and verify GEN RPM shows 1650 + RPM’s on the LEFT side.

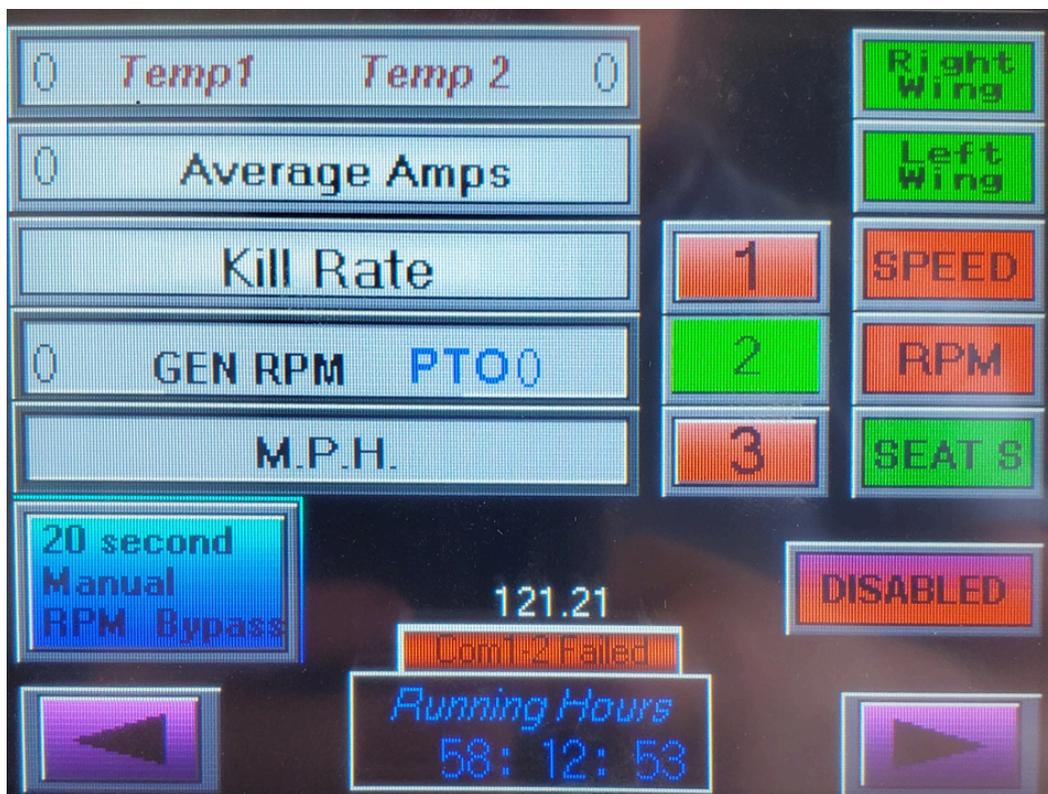

If no GEN RPM’s are displayed turn off power for 30 seconds and retry sequence.

WARNING!

Turning off power without keeping it off for a full 30 seconds will not drain the DC STEP UP TRANSFORMER CAPACITORS and will not reset the computer!